



American Alloy Corporation
 A Subsidiary of P&H Mining Equipment
 9501 Allen Drive, Cleveland, OH 44125
 Phone: (216) 642-9600
 Fax: (216) 642-9677
 www.PyramidParts.com

For Replacement In
 Link Belt
 Master Numerical by OEM No

OEM No	Description	Application	Pyramid Part No	Approx Wt. (LBS)
102R020Y045R	BOLT	See below	LB8K	New
	Applications: 108HYLAB5,138HSL,138HYLAB5,218HYLAB5,308HYLAB5,LS108HII,LS138H,LS138HII,LS208H,LS208HII,			
162R020VR	NUT	See below	LB8010	New
	Applications: 108HYLAB5,138HSL,138HYLAB5,218HYLAB5,308HYLAB5,LS108HII,LS138H,LS138HII,LS208H,LS208HII,			
18C0008	USE 18C0062	LS110,LS88		
18C0062	SPROCKET	LS110,LS88	LB67C1	193.0 NS
190002001	CHAIN LINK	LS58	PC2010	1.3 SMV
190002002	CHAIN LINK	LS78	PC2511	1.9 NS
190002003	CHAIN LINK	LS78	PC2510	2.5 NS
190002004	CHAIN LINK	LS110,LS88	PC3012	3.3
190002008	CHAIN LINK	LS88	PC3514	4.7
190002009	CHAIN LINK	LS318	PC4015A	6.2
190002010	CHAIN LINK	LS318	PC4518	9.3
190002011	CHAIN LINK	LS318	PC5020	13.8
190006001	USE 190002001	LS58		
190006002	USE 190002002	LS78		
190006004	USE 190002004	LS110,LS88		
190006008	USE 190002008	LS88		
190006009	USE 190002009	LS318		
190006010	USE 190002010	LS318		
190006011	USE 190002011	LS318		
1A0003	ROLLER	LS110,LS58,LS78,LS88	LB21R1	26.0
1A0015	BUSHING	LS110,LS88	LB651	10.0
1A0019	BUSHING	LS110,LS88	LB662	3.0
1A0020	BUSHING	LS110,LS88	LB663	3.1
1A0153	WASHER	LS110,LS88	LB654	3.0
1A0154	BUSHING	LS88	LB531	5.5 NS
1A0156	SHAFT	LS88	LB526	34.0
1A0157	BUSHING	LS88	LB521	2.0
1A0243	USE 1A5444	LS58,LS78,LS88		
1A0244	USE 1A5445	LS58,LS78,LS88		
1A0248	BRACKET	LS58,LS78,LS88	LB2022	5.0 NS
1A0254	BRACKET-SHAFT	LS58,LS88	LB216L	8.5 NS
1A0256	SHAFT	LS88	LB536	88.0 NS
1A0311	BRACKET-SHAFT	LS58,LS78	LB217L	7.0 NS
1A0326	WASHER	LS88	LB524	4.0
1A0343	USE 1A5535	LS88		
1A0359	WASHER	LS58,LS78,LS88	LB205	1.0
1A0360	SHAFT	LS58,LS78,LS88	LB206	13.0
1A0363	SHAFT	LS88	LB537	99.0 NS
1A0732	PIN KEEPER	LS110,LS58,LS78,LS88	LB2K	0.1 XI
1A0964	WASHER	LS58,LS78,LS88	LB204	0.7

Note: Select parts per OEM parts manual or consult Pyramid.
 All manufacturer's names, numbers, symbols and descriptions are used for reference purposes only and it is not implied that any part listed and provided by Pyramid Parts is the product of these manufacturers.
Prices Subject to Change Without Notice.

August 7, 2010



American Alloy Corporation
 A Subsidiary of P&H Mining Equipment
 9501 Allen Drive, Cleveland, OH 44125
 Phone: (216) 642-9600
 Fax: (216) 642-9677
 www.PyramidParts.com

For Replacement In
 Link Belt
 Master Numerical by OEM No

OEM No	Description	Application	Pyramid Part No	Approx Wt. (LBS)
1A1025	SHAFT	LS88	LB539	81.0 NS
1A1046	USE 3A0176	LS88		
1A1135	USE 1A5444	LS58,LS78,LS88		
1A1136	USE 1A5445	LS58,LS78,LS88		
1A1287	WASHER	LS110,LS88	LB634	6.0
1A1291	SPROCKET	LS88	LB63C1	112.0
1A1292	BRACKET-SHAFT	LS88	LB616L	9.5
1A1293	BRACKET	LS88	LB617	6.0
1A1294	USE 1A5494	LS88		
1A1295	WASHER	LS110,LS88	LB635	5.0
1A1296	USE 1A5557	LS110		
1A1297	USE 1A5558	LS110		
1A1301	BUSHING	LS110,LS88	LB631	6.5
1A1302	BUSHING	LS110,LS88	LB632	3.5
1A1306	SHIM	LS88	LB638	0.5 NS
1A1307	BUSHING	LS88	LB650	13.0 SMV
1A1308	WASHER	LS110,LS78,LS88	LB633	5.0
1A1310	SHIM	LS88	LB639	0.3 NS
1A1312	USE 1A5536	LS88		
1A1424	BUSHING	LS58,LS78,LS88	LB201	1.3
1A1457	USE 1A5243	LS58,LS78,LS88		
1A1477	USE 1A5494	LS88		
1A1480	BUSHING	LS88	LB652	11.0
1A1495	SHAFT	LS88	LB636	116.0
1A1496	TUMBLER	LS88	LB63T1	213.0
1A1542	BUSHING	LS58,LS78,LS88	LB202	1.0 XI
1A2065	USE 1A2699	LS88		
1A2524	USE 1A5444	LS58,LS78,LS88		
1A2525	USE 1A5445	LS58,LS78,LS88		
1A2684	SHOE PIN	LS58,LS78,LS88	LB1P4-11/4	5.9 NS
1A2698	WASHER	LS88	LB525	4.0
1A2699	ROLLER ASSY	LS88	LB52R4B	190.0 NS
1A3704	COUPLING	LS88	LB46090	66.0 SMV
1A4349	SHAFT	LS88	LB46093	89.0
1A4367	BOLT, SPECIAL	LS88	LB46082	9.4 NS
1A4406	USE 1A5449	LS110,LS88		
1A4561	USE 1A5450	LS110,LS88		
1A4564	PIN	LS110,LS88	LB2P7-13/8	5.5
1A4564-OS	PIN, OS	LS110,LS88	LB2P7-17/16	6.0 NS
1A4570	USE 1A5218	LS110		
1A4670	SPROCKET	LS110	LB53C5	128.0
1A4690	SPROCKET	LS110	LB46089	106.0 NS

Note: Select parts per OEM parts manual or consult Pyramid.
 All manufacturer's names, numbers, symbols and descriptions are used for reference purposes only and it is not implied that any part listed and provided by Pyramid Parts is the product of these manufacturers.
Prices Subject to Change Without Notice.



American Alloy Corporation
 A Subsidiary of P&H Mining Equipment
 9501 Allen Drive, Cleveland, OH 44125
 Phone: (216) 642-9600
 Fax: (216) 642-9677
 www.PyramidParts.com

For Replacement In
 Link Belt
 Master Numerical by OEM No

OEM No	Description	Application	Pyramid Part No	Approx Wt. (LBS)
1A4696	SHAFT	LS110	LB535	106.0
1A4712	BUSHING	LS110	LB649	12.0
1A4718	WASHER	LS110	LB648	1.8 SMV
1A4719	WASHER	LS110	LB646	2.9 SMV
1A4735	PIN	LS58,LS78,LS88	LB1P4-13/16	5.4 NS
1A4736	PIN	LS58,LS78,LS88	LB1P4-11/8	4.7
1A4738	INSERT	LS88	LB46083	15.4 SMV
1A4751	BUSHING	LS88	LB653	15.0 NS
1A4752	WASHER	LS88	LB647	3.3 NS
1A4755	SPROCKET	LS88	LB46085	25.0 NS
1A4823	RING	LS110	LB605	0.1 SMV
1A4824	SEAL	LS110	LB528	0.7
1A4826	IDLER, ROLLER	LS110	LB52R5	234.0
1A4826AY	ROLLER ASSY	LS110	LB52R5X	287.0
1A4827	SLEEVE	LS110	LB529	7.5
1A4828	ADJUSTING NUT	LS110	LB5222	21.0
1A4829	ADJUSTING NUT	LS110	LB5223	10.7
1A4830	SHAFT	LS110	LB527	35.0
1A4832	SHAFT	LS110	LB46095	108.5 NS
1A4875	USE 1A5571	LS110		
1A4876	USE 1A5494	LS88		
1A4882	BRACKET-SHAFT	LS110	LB518L	15.0
1A4883	BRACKET	LS110	LB519	11.0 SMV
1A5218	ROLLER ASSY	LS110	LB30R1B	44.0 SMV
1A5220	BUSHING	LS110	LB301	1.7 NS
1A5229	SHAFT	LS110	LB306	14.4 NS
1A5241	ROLLER ASSY	LS58,LS78,LS88	LB20R2B	44.6
1A5243	ROLLER ASSY	LS58,LS78,LS88	LB20R1B	45.0 SMV
1A5389	USE 1A5579			
1A5393	USE 1A5579	SEALED		
1A5443	TRACK SHOE	LS58,LS78,LS88	LB2L6-24	69.0 NS
1A5443-AY	SHOE ASSY	LS58,LS78,LS88	LB2L6-24AY	78.0 NS
1A5444	TRACK SHOE	LS58,LS78,LS88	LB2L6-30	89.0 SMV
1A5444-AY	SHOE ASSY	LS58,LS78,LS88	LB2L6-30AY	95.0
1A5445	TRACK SHOE	LS58,LS78,LS88	LB2L6-36	113.0
1A5445-AY	SHOE ASSY	LS58,LS78,LS88	LB2L6-36AY	120.0
1A5449	TRACK SHOE	LS110,LS88	LB2L7-30	109.0 NS
1A5449-AY	SHOE ASSY	LS110,LS88	LB2L7-30AY	120.0 NS
1A5450	TREAD SHOE	LS110,LS88	LB2L7-36	140.0
1A5450-AY	SHOE ASSY	LS110,LS88	LB2L7-36AY	151.0
1A5464	TUMBLER	LS110	LB53T5	250.0
1A5480	USE 1A1293	LS88		

Note: Select parts per OEM parts manual or consult Pyramid.

All manufacturer's names, numbers, symbols and descriptions are used for reference purposes only and it is not implied that any part listed and provided by Pyramid Parts is the product of these manufacturers.

Prices Subject to Change Without Notice.

August 7, 2010

Page: 3 of 10



American Alloy Corporation
 A Subsidiary of P&H Mining Equipment
 9501 Allen Drive, Cleveland, OH 44125
 Phone: (216) 642-9600
 Fax: (216) 642-9677
 www.PyramidParts.com

For Replacement In
 Link Belt
 Master Numerical by OEM No

OEM No	Description	Application	Pyramid Part No	Approx Wt. (LBS)
1A5494	SPROCKET	LS88	LB65C1	40.0
1A5534	SHOE PIN	LS110,LS88	LB2P7-11/2	5.5 NS
1A5535	WASHER	LS88	LB665	2.0
1A5536	WASHER	LS88	LB655	2.0
1A5557	BLOCK, BEARING, ASSY	LS110,LS88	LB63H2B	52.4
1A5558	BLOCK, BEARING, ASSY	LS110,LS88	LB63H1B	65.0
1A5571	RETAINER	LS110	LB604	2.0 NS
1A5579	ROLLER ASSY	SEALED	LB40R2BX	76.5
1A5580	ROLLER SHELL	SEALED	LB40R2	46.0
1A5581	SHAFT	SEALED	LB4026	12.8
1A5582	BUSHING	SEALED	LB4021	1.0
1A5583	O-RING	SEALED	LB4027	0.1
1A5584	COLLAR	SEALED	LB4023	6.2
1A5585	SEAL GROUP	SEALED	LB4024	1.0
1A5586	ROLL PIN	SEALED	LB4025	0.1
1A5587	PLUG	SEALED	LB4028	0.1
1B0154	ROLLER	LS88	LB64R1	27.0 NS
1B0676	ROLLER	LS110,LS88	LB24R1	24.0 NS
1B1011	USE 1B1034	LS110,LS88		
1B1014	PIN	LS88	LB46072	18.0 NS
1B1034	SHAFT	LS110,LS88	LB656	16.2 SMV
1C0016	USE 1C0180	LS110,LS88		
1C0021	USE 1C0271	LS110,LS88		
1C0148	SHAFT	LS110,LS88	LB679	54.0 NS
1C0150	COUPLING	LS110,LS88	LB670	10.0 NS
1C0180	CLUTCH DRUM	LS110,LS88	LB675	130.0 NS
1C0271	PINION	LS110,LS88	LB677	18.0 NS
1C0303	GEAR	LS110,LS88	LB686	200.0 NS
1C0323	USE 1C0523	LS110,LS88		
1C0324	GEAR SET	LS110,LS88	LB694	140.0 NS
1C0350	USE 1C0393	LS110,LS88		
1C0393	PINION SHAFT	LS110,LS88	LB676	124.0 SMV
1C0407	CLUTCH DRUM	LS110,LS88	LB46088	178.0 NS
1C0523	GEAR SET	LS110,LS88	LB697	123.0 NS
1D0010	BRAKE DRUM	LS110,LS88	LB657	225.0 NS
1E0003	SHAFT	LS110,LS88	LB688	123.0 NS
1E0007	USE 1C0303	LS110,LS88		
1F0003	WASHER	LS110,LS88	LB668	1.0 NS
1F0009	USE 1C0323	LS110,LS88		
1F0011	WASHER	LS110,LS88	LB645	1.2 NS
1F0012	USE 1F0189	LS110,LS88		
1F0063	USE 1F0197	LS110,LS88		

Note: Select parts per OEM parts manual or consult Pyramid.
 All manufacturer's names, numbers, symbols and descriptions are used for reference purposes only and it is not implied that any part listed and provided by Pyramid Parts is the product of these manufacturers.
Prices Subject to Change Without Notice.



American Alloy Corporation
 A Subsidiary of P&H Mining Equipment
 9501 Allen Drive, Cleveland, OH 44125
 Phone: (216) 642-9600
 Fax: (216) 642-9677
 www.PyramidParts.com

For Replacement In
 Link Belt
 Master Numerical by OEM No

OEM No	Description	Application	Pyramid Part No	Approx Wt. (LBS)
1F0102	USE 1F0196	LS88		
1F0154	SPACER	LS110,LS88	LB46060-2	6.0 NS
1F0164	PINION, SWING	LS110,LS88	LB46079	55.0 NS
1F0166	PINION, SWING O/S	LS110,LS88	LB46080	56.0 NS
1F0187	USE 1F0189	LS110,LS88		
1F0189	GEAR	LS110,LS88	LB687	60.0 NS
1F0195	SHAFT ASSY	LS88	LB46077	120.0 NS
1F0196	SHAFT	LS88	LB46076	102.0 NS
1F0197	SHAFT ASSY	LS110,LS88	LB46060	107.5 NS
1F0200	SHAFT	LS110,LS88	LB46092	72.0 NS
1G0003	BUSHING	LS110,LS88	LB661	17.0
1G0005	SHAFT	LS110,LS88	LB659	66.0 NS
1G0007	USE 1G0039	LS110,LS88		
1G0008	BUSHING	LS110,LS88	LB666	5.0 SMV
1G0010	SPACER	LS110,LS88	LB46081	4.0
1G0039	GEAR ASSY	LS110,LS88	LB46084	91.0 NS
1H1344	SPROCKET	LS110,LS88	LB68C1	7.0 NS
1J1544	PAWL, SWING LOCK	LS88	LB46073	61.0 NS
1K0302	O-RING	LS110	LB608	0.1 NS
1K0554	BUSHING	LS88	LB591	2.3 NS
1M4616	BUSHING	LS88	LB46087	1.5
1X0041	LOCKWASHER	LS110,LS88	LB46078	0.2 NS
1X0096	LOCKNUT	LS110,LS88	LB46071	1.8 NS
1X0155	USE 1X6304			
1X0487	SET SCREW	See below	LB208	0.1
	Applications: LS110,LS318,LS58,LS78,LS88			
1X0559	USE 1X6304			
1X0812	GREASE FITTING	LS318,LS58,LS78,LS88	LB2018	
1X0813	GREASE FITTING	See below	LB2019	1.0
	Applications: LS110,LS318,LS58,LS78,LS88			
1X0825	PLUG	LS110	LB5228	0.1
1X1865	USE 1X5446			0.5
1X2146	CAPSCREW	SEALED	LB4010	0.3 SMV
1X3341	CONE, TAPERED BEARING	LS110	LB522	3.5
1X3342	CUP, TAPERED BEARING	LS110	LB523	2.0
1X3360	USE 1X5446	LS58,LS78,LS88		
1X3719	CAPSCREW	LS718	H07355	0.2
1X3763	USE 1X5642	LS318		
1X3870	LOCKNUT	LS718	LB7014	0.1
1X5446	SEAL	LS58,LS78,LS88	LB209	0.3
1X5642	BOLT	LS318	LB46103	1.1 NS
1X6304	USE 1X6985	LS318		

Note: Select parts per OEM parts manual or consult Pyramid.

All manufacturer's names, numbers, symbols and descriptions are used for reference purposes only and it is not implied that any part listed and provided by Pyramid Parts is the product of these manufacturers.

Prices Subject to Change Without Notice.

August 7, 2010

Page: 5 of 10



American Alloy Corporation
 A Subsidiary of P&H Mining Equipment
 9501 Allen Drive, Cleveland, OH 44125
 Phone: (216) 642-9600
 Fax: (216) 642-9677
 www.PyramidParts.com

For Replacement In
 Link Belt
 Master Numerical by OEM No

OEM No	Description	Application	Pyramid Part No	Approx Wt. (LBS)
1X6985	CAPSCREW ASSY	LS318	LB7K3N	0.5
20A0065	SHAFT	LS88	LB506	14.4 NS
21A0020	BUSHING	LS318	LB428	11.0
21A0021	BUSHING	LS318	LB429	8.0
21A0119	WASHER	LS318	LB430	2.0
21A0158	USE 21A0291			
21A0160	SHAFT	LS318	LB437	174.0
21A0165	WASHER	LS318	LB435	6.0
21A0166	SHAFT CAP	LS318	LB431	10.0 NS
21A0167	WASHER	LS318	LB438	5.0
21A0168	WASHER	LS318	LB439	5.5
21A0169	BUSHING	LS318	LB432	7.0
21A0170	BUSHING	LS318	LB433	8.0
21A0182	BUSHING	LS318	LB422	9.0
21A0183	WASHER	LS318	LB425	5.0
21A0185	SHAFT	LS318	LB427	78.0
21A0291	USE 21A0679	LS318		
21A0300	USE 1A5229	LS110		
21A0301	USE 1A5218	LS110		
21A0614	SPROCKET	LS318	LB43C2	152.0
21A0662	USE 1A5218	LS110		
21A0669	USE 21A0670	LS318		
21A0670	IDLER ASSY	LS318	LB42R2B	348.0
21A0679	TUMBLER	LS318	LB43T3	384.0
21C0023	SPROCKET	LS318	LB46070	162.0 NS
21D0191	BRAKE DRUM	LS318	LB46075	325.0 NS
25A0163	BUSHING	LS58	LB222	2.1 NS
25A0303	SHAFT	LS58	LB235	50.0 NS
25A0344	SHAFT	LS58	LB226	15.8 NS
32A0050	TRACK SHOE, 60"	LS718	LB7L5-60	534.0 NS
32A0050AY	SHOE ASSY, 60"	LS718	LB7L5-60AY	634.0 NS
32A0086	TRACK PIN	LS718	LB7P5-2	16.6 NS
3A0176	BOLT KIT	LS88	LB3220KT	
3A173	USE 190002004			
3A21314	ROLLER	LS238H,LS318	LB70R2	168.0 New
3A21315	SEAL	LS238H,LS318	LB703	New
3A21316	O-RING	LS238H,LS318	LB708	New
3A21317	SHAFT	LS238H,LS318	LB706	34.8 New
3A21318	PLUG	LS238H,LS318	LB7010	0.8 New
3A21319	RETAINER	LS238H,LS318	LB709	New
3A21320	CAP	LS238H,LS318	LB704	11.0 New
3A21321	BUSHING	LS238H,LS318	LB702	2.1 New

Note: Select parts per OEM parts manual or consult Pyramid.
 All manufacturer's names, numbers, symbols and descriptions are used for reference purposes only and it is not implied that any part listed and provided by Pyramid Parts is the product of these manufacturers.
Prices Subject to Change Without Notice.



American Alloy Corporation
 A Subsidiary of P&H Mining Equipment
 9501 Allen Drive, Cleveland, OH 44125
 Phone: (216) 642-9600
 Fax: (216) 642-9677
 www.PyramidParts.com

For Replacement In
 Link Belt
 Master Numerical by OEM No

OEM No	Description	Application	Pyramid Part No	Approx Wt. (LBS)
3A6372	USE 190002010			
3A6374	USE 190002009			
3A6375	USE 190002011			
3A6378	USE 190002011			
430X38820	BEARING CUP			
431X38885	BEARING CONE			
8A0072	SHAFT	LS78	LB326	36.0 NS
8A0075	BUSHING	LS78	LB321	1.7 SMV
8A0076	WASHER	LS78	LB324	4.1 NS
8A0078	BUSHING	LS78	LB331	4.0 NS
8A0087	SHAFT	LS78	LB336	73.0 NS
8A0114	THRUST WASHER	LS78	LB352	1.5 NS
8A0146	ADJUSTING BOLT	LS110,LS78,LS88	LB3220	7.6
8A0148	ADJUSTING NUT	LS110,LS78,LS88	LB3222	3.0 SMV
8A0226	WASHER	LS78	LB335	3.5 NS
8A0227	WASHER	LS78	LB334	3.6 NS
8A0232	BUSHING	LS78	LB332	4.3 NS
8A0233	BUSHING	LS78	LB333	5.9 NS
8A0264	BRACKET-SHAFT	LS78	LB316L	9.6 NS
8A0326	THRUST WASHER	LS78	LB353	1.4 NS
8A0327	THRUST WASHER	LS78	LB354	1.7 NS
8A0562	USE 1A5445			
8A0905	ROLLER ASSY	LS78	LB32R1B	135.0 NS
8A1609	PIN, O/S	LS58,LS78,LS88	LB2P1-11/4	4.5 NS
8A1703	USE 1A5444			
8A1704	USE 1A5445			
8A5611	USE 1A5444			
8B0113	BUSHING	LS78	LB365	9.0 NS
8C0015	PINION	LS78	LB355	30.0 NS
8C0107	SPROCKET	LS78	LB37C1	175.0 NS
8E0004	GEAR	LS78	LB257	86.0 NS
8G0040	GEAR SET	LS78	LB358	98.0 NS
8J0663	PAWL, SWING LOCK	LS78	LB46074	41.0 NS
9A0003	SHAFT	LS318	LB726	100.0
9A0004	BUSHING	LS318	LB722	9.0
9A0006	WASHER	LS318	LB725	7.0
9A0015	SPROCKET	LS318	LB73C2	257.1
9A0019	BUSHING	LS318	LB733	10.9
9A0020	BUSHING	LS318	LB734	12.0
9A0024	WASHER	LS318	LB737	7.0
9A0025	WASHER	LS318	LB739	5.5
9A0028	SHAFT	LS318	LB736	269.4

Note: Select parts per OEM parts manual or consult Pyramid.

All manufacturer's names, numbers, symbols and descriptions are used for reference purposes only and it is not implied that any part listed and provided by Pyramid Parts is the product of these manufacturers.

Prices Subject to Change Without Notice.

August 7, 2010

Page: 7 of 10



American Alloy Corporation
 A Subsidiary of P&H Mining Equipment
 9501 Allen Drive, Cleveland, OH 44125
 Phone: (216) 642-9600
 Fax: (216) 642-9677
 www.PyramidParts.com

For Replacement In
 Link Belt
 Master Numerical by OEM No

OEM No	Description	Application	Pyramid Part No	Approx Wt. (LBS)
9A0054	BOLT	LS318	LB7220	12.5
9A0109	WASHER	LS318	LB738	9.2
9A0317	USE 9A1024	LS318		
9A0466	USE 9A1025	LS318		
9A0867	SHAFT	LS318	LB717	5.5
9A0934	WASHER	LS318	LB705	1.7
9A1024	TRACK SHOE	LS318	LB7L3-38	185.0 NS
9A1024-AY	SHOE ASSY	LS318	LB7L3-38AY	199.0 NS
9A1025	TRACK SHOE	LS318	LB7L3-44	210.0 NS
9A1025-AY	SHOE ASSY	LS318	LB7L3-44AY	224.0 NS
9A1036	USE 9A1109	LS318		
9A1041	TRACK SHOE	LS318	LB7L4-44	310.0
9A1041-AY	SHOE ASSY	LS318	LB7L4-44AY	325.0
9A1042	SHOE PIN	LS318	LB7P4-11/2	13.8
9A1043	NUT	LS318	LB7222	3.5
9A1068	BUSHING	LS318	LB751	13.7
9A1077	SHAFT	LS318	LB707	30.0
9A1083	IDLER ASSY	LS318	LB72R2B	413.0
9A1109	TUMBLER	LS318	LB73T2	544.0
9C0029	SHAFT	LS318	LB46067	216.0 NS
9C0030	SHAFT	LS318	LB46066	92.0 NS
9C0031	COUPLING	LS318	LB46065	11.0 NS
9C0033	COUPLING	LS318	LB46064	9.5 NS
9C0034	SPACER	LS318	LB46063	1.7 NS
9C0045	USE 21D0191	LS318		
9C0048	SPROCKET	LS318	LB46069	394.0 NS
9C0218	PINION	LS318	LB46068	49.0 NS
9K0132	SHEAVE W/BUSHING	LS318	LB46101	23.0 SMV
9K0133	BUSHING	LS318	LB46102	1.1
AA0083	USE 1A0157			
AA0089	USE 1A1424			
AA0090	USE 1A0360			
AA0091	USE 1A0359			
AA0092	USE 1A0964			
AA0422	USE 1A0360			
AA0549	USE 1A4736			
AA0644	BUSHING	LS110,LS88	LB667	4.6 NS
AB0092	BUSHING	LS58	LB231	2.0 NS
AC2723	WASHER	LS58	LB224	3.1 NS
AC2782	WASHER	LS58	LB234	3.0 NS
AC3002	BRACKET-SHAFT	LS58	LB219L	6.0 NS
AC3087	USE AC5244			

Note: Select parts per OEM parts manual or consult Pyramid.

All manufacturer's names, numbers, symbols and descriptions are used for reference purposes only and it is not implied that any part listed and provided by Pyramid Parts is the product of these manufacturers.

Prices Subject to Change Without Notice.

August 7, 2010

Page: 8 of 10



American Alloy Corporation
 A Subsidiary of P&H Mining Equipment
 9501 Allen Drive, Cleveland, OH 44125
 Phone: (216) 642-9600
 Fax: (216) 642-9677
 www.PyramidParts.com

For Replacement In
 Link Belt
 Master Numerical by OEM No

OEM No	Description	Application	Pyramid Part No	Approx Wt. (LBS)
AC3322	USE 1A0732			
AC4306	USE AC5244			
AC4539	PIN, O/S	LS58,LS78,LS88	LB2P1-13/16	4.1
AC5244	PIN	LS58,LS78,LS88	LB2P1-11/8	3.5
AE0104	USE 1A0154			
AE0113	LOCK PLATE	LS110,LS78,LS88	LB2224	0.5 NS
AE0141	USE 1A0359			
AR0461	USE 190002011	LS318		
AT0261F	BUSHING	LS318	LB711	1.0
AT0269	BUSHING	LS318	LB701	3.5
AT0285A	USE 190002009	LS318		
AT0651	SHOE PIN	See below	LB7P3-11/2	12.0
	Applications: 108HYLAB5,138HSL,138HYLAB5,218HYLAB5,308HYLAB5,LS108HII,LS138H,LS138HII,LS208H,LS208HII,			
AT1117	ROLLER W/BUSHINGS	LS318	LB70R1B	168.0
BHA0863	O-RING	LS138HII,LS208HII	LB8016	New
BHA1022	PLUG	LS138H,LS208H,LS218H	LB8028	New
BKA1687	USE AT0651	See below		
	Applications: 108HYLAB5,138HSL,138HYLAB5,218HYLAB5,308HYLAB5,LS108HII,LS138H,LS138HII,LS208H,LS208HII,			
BRA0253	BUSHING	LS138H,LS208H	LB8021	1.4 New
BRA0258	CLIP	See below	LB8025	NS
	Applications: LS138H,LS138HII,LS208H,LS208HII			
BRA0259	O-RING	LS138H,LS208H	LB8027	New
C4A1053	ROLLER ASSY, SEALED	LS238H,LS318	LB70R2BX	New
CBA0137	COLLAR	LS138H,LS208H	LB8023	7.0 New
CBA0138	SHAFT	LS138H,LS208H	LB8026	19.0 New
CC0328	SPROCKET	LS58	LB25C1	92.0 NS
CDA0029	ROLLER ASSY	LS138H,LS208H	LB80R2BX	295.0 New
CDA0030	ROLLER SHELL	LS138H,LS208H	LB80R2	96.0 New
CDA0094	USE CDA0496	See below		
	Applications: 108HYLAB5,138HSL,138HYLAB5,218HYLAB5,308HYLAB5,LS108HII,LS138H,LS138HII,LS208H,LS208HII,			
CDA0496	36" LINK	See below	LB8L1-36	132.0 New
	Applications: 108HYLAB5,138HSL,138HYLAB5,218HYLAB5,308HYLAB5,LS108HII,LS138H,LS138HII,LS208H,LS208HII,			
CDA0496-AY	36" LINK ASSY	See below	LB8L1-36AY	New
	Applications: 108HYLAB5,138HSL,138HYLAB5,218HYLAB5,308HYLAB5,LS108HII,LS138H,LS138HII,LS208H,LS208HII,			
CDA1254	ROLLER ASSY	LS138HII,LS208HII	LB80R4BX	119.0 NS
CDA1255	ROLLER SHELL	LS138HII,LS208HII	LB80R4	80.0 NS
CDA1256	SHAFT	LS138HII,LS208HII	LB8029	18.0 NS
CDA1257	COLLAR	LS138HII,LS208HII	LB8022	7.0 NS
CDA1258	BUSHING	LS138HII,LS208HII	LB8020	1.0 NS
FA0051	BUSHING	LS88	LB671	4.7 NS
FC0107	GEAR	LS58	LB2310	32.0 NS
GC0240	GEAR, CLUSTER	LS58	LB258	56.0 NS

Note: Select parts per OEM parts manual or consult Pyramid.
 All manufacturer's names, numbers, symbols and descriptions are used for reference purposes only and it is not implied that any part listed and provided by Pyramid Parts is the product of these manufacturers.
Prices Subject to Change Without Notice.

August 7, 2010



American Alloy Corporation
 A Subsidiary of P&H Mining Equipment
 9501 Allen Drive, Cleveland, OH 44125
 Phone: (216) 642-9600
 Fax: (216) 642-9677
 www.PyramidParts.com

For Replacement In
 Link Belt
 Master Numerical by OEM No

OEM No	Description	Application	Pyramid Part No	Approx Wt. (LBS)
HC1235	DOWEL	LS110,LS318	LB309	0.1
KHJ0300	PLUG	See below	LB8015	New
	Applications: LS138HII,LS208HII,LS218H			
KRA0646	SEAL	See below	LB8024	New
	Applications: LS138H,LS138HII,LS208HII			
LB2L6 SHOES	REPAIR LUG, SHOE	LS58,LS78,LS88	LB2L6RL	2.0
LB2L7SHOES	REPAIR LUG, SHOE	LS110,LS88	LB2L7RL	3.0
LB7L3 SHOES	REPAIR LUG, SHOE	LS318	LB7L3RL	3.0 SMV
LB7L4 SHOES	REPAIR LUG, SHOE	LS318	LB7L4RL	2.7
LXS1245M	USE 190002009	LS318		
LXS2058M	USE 190002001	LS58		
LXS2065	USE 190002001	LS58		
LXS2570	USE 190002002	LS78		
LXS2575	USE 190002002	LS78		
LXS2585	USE 190002003	LS78		
LXS3011M	USE 190002004	LS110,LS88		
LXS3514M	USE 190002008	LS88		
LXS4522	USE 190002010	LS318		
LXS5022M	USE 190002011	LS318		
LXS5028M	USE 190002011	LS318		
MA1031	BUSHING	LS88	LB46091	1.5 NS
PX0421	LINING KIT	LS318	LB46094	10.0 NS
RC160	CHAIN LINK	LS58	PC160HE	1.2
RC60-3X262	CHAIN ASSY	LS78	PC60-3X262	5.0 NS
RC60-4X261	CHAIN ASSY	LS88	PC60-4X261	64.0
RC60-4X272	CHAIN ASSY	LS110,LS88	PC60-4X272	54.0 NS
RC60-4X275	CHAIN ASSY		PC60-4X275	New
RO2010	USE 190002002	LS78		
RO2512	USE 190002004	LS110,LS88		
RO2814	USE 190002008	LS88		
RO3160	USE 190002001			
RO3200	USE 190002003	LS78		
RO3315	USE 190002009	LS318		
RO3618	USE 190002010	LS318		
RO4020	USE 190002011	LS318		
RO5022	USE 190002011	LS318		
SS0124-3	USE 190002009			

Note: Select parts per OEM parts manual or consult Pyramid.

All manufacturer's names, numbers, symbols and descriptions are used for reference purposes only and it is not implied that any part listed and provided by Pyramid Parts is the product of these manufacturers.

Prices Subject to Change Without Notice.

August 7, 2010

Page: 10 of 10